

Device Firmware Updates

You will need a computer and an USB key **formatted in format FAT32** in order to update your device.


Download the latest update file on our website (c|AQWO or t|AQWO) :

<http://www.metronome.audio/index.php/les-gammes-metronome/telechargement-metronome>

Prepare the USB Key

1) Plug the USB key in your computer

2) Check if system of files is FAT32

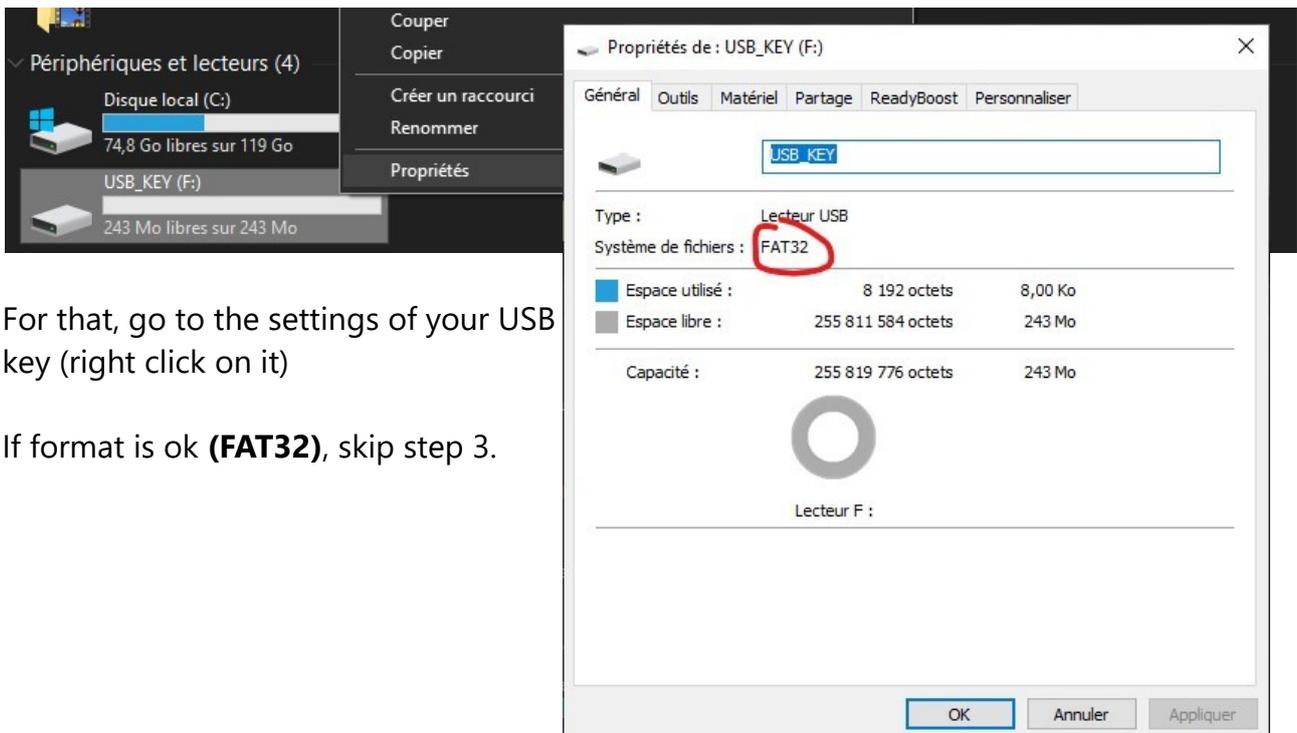

The image shows two screenshots from a Windows operating system. The left screenshot shows the 'Périphériques et lecteurs' (Devices and Drives) section of File Explorer. It displays two drives: 'Disque local (C:)' with 74,8 Go libres sur 119 Go, and 'USB_KEY (F:)' with 243 Mo libres sur 243 Mo. A context menu is open over the USB key, showing options like 'Couper', 'Copier', 'Créer un raccourci', 'Renommer', and 'Propriétés'. The right screenshot is the 'Propriétés de : USB_KEY (F:)' dialog box. The 'Général' tab is selected, showing the drive name 'USB_KEY', the type 'Lecteur USB', and the file system 'FAT32', which is circled in red. Below this, there is a table showing disk usage:

Espace utilisé :		8 192 octets	8,00 Ko
<input checked="" type="checkbox"/>	Espace libre :	255 811 584 octets	243 Mo
Capacité :		255 819 776 octets	243 Mo


At the bottom of the dialog box, there is a progress indicator labeled 'Lecteur F :'. The 'OK' button is highlighted.

For that, go to the settings of your USB key (right click on it)

If format is ok (**FAT32**), skip step 3.

3) Careful, step c will ERASE ALL THE FILES you have on the USB key, be sure to save it before.

If format is not **FAT32**, format your USB key in **FAT32** :

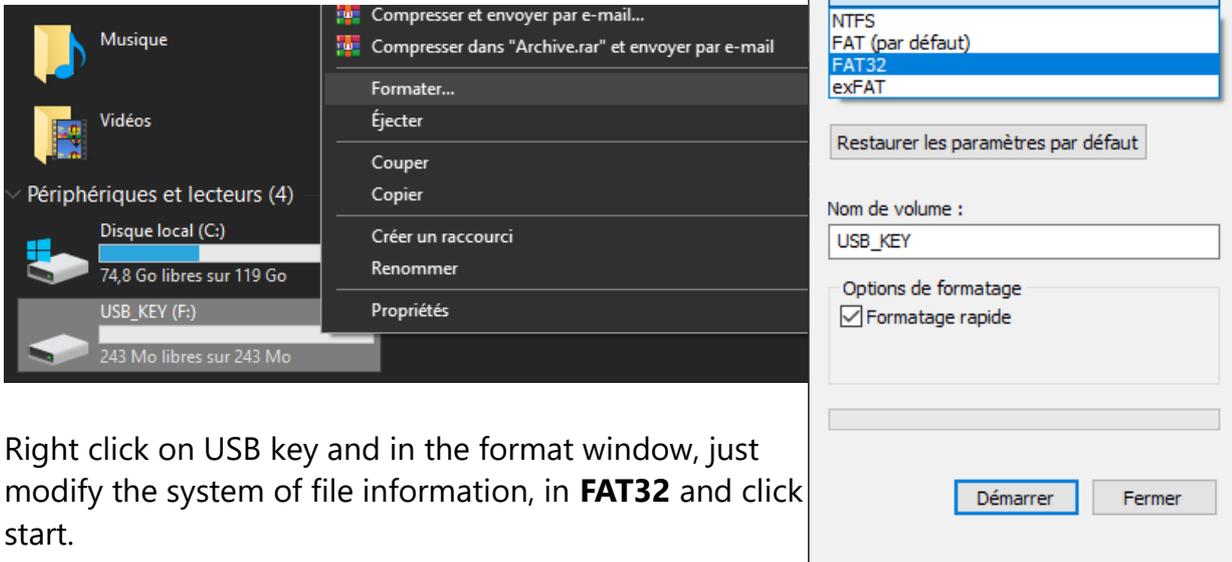

Right click on USB key and in the format window, just modify the system of file information, in **FAT32** and click start.

4) Put the file on the USB key

Open the folder (archive **.zip**) you've downloaded on Metronome's website and copy the file it contains :

Nom	Type
cAQWO.hex	Fichier HEX

OR

Nom	Type
tAQWO.hex	Fichier HEX

And **PASTE** it directly in the **root repertory** of the USB key (not in a folder).

Update your device

5) Switch OFF your device (c|AQWO or t|AQWO)

6) Plug the USB key in your device

7) Switch ON your device (It will launch the update process)

The update takes about 30 seconds max. During this process the screen remains black
Once the update is over, your device will boot automatically.

Do not turn off the device or unplug USB key during the update process.

8) Unplug the USB key